
REPAIR INSTRUCTIONS

Square Flat Sealed Covers Seal - Removal and Replacement





INTRODUCTION


The seal comprises of a rubber seal and nylon locking tube. To replace the existing seal, carry out the following with the fitting components illustrated below:

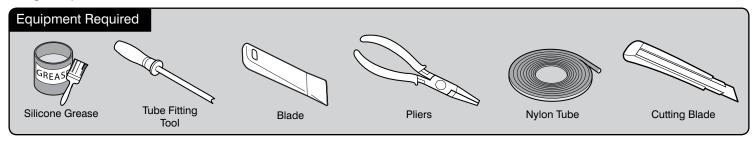


Removing the Old Seal

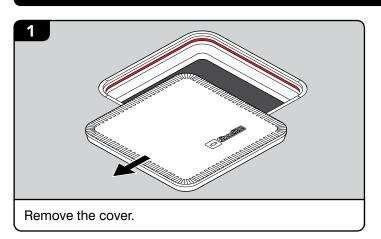

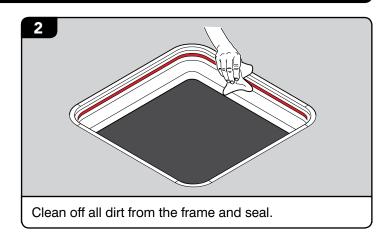


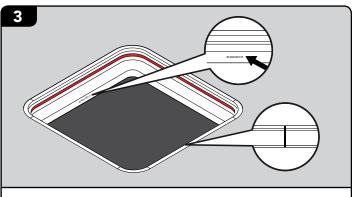


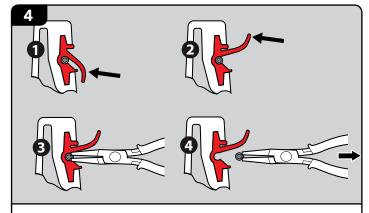

Locate the joint in the nylon tube. This is positioned above the frame serial number located on one of the vertical sides.

Lift up the seal to reveal the tube. Using a pair of pliers pinch the tube then pull out and discard.

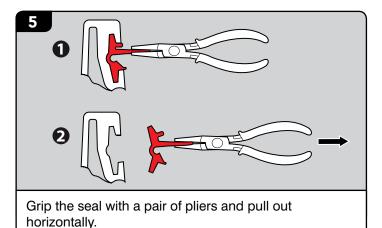

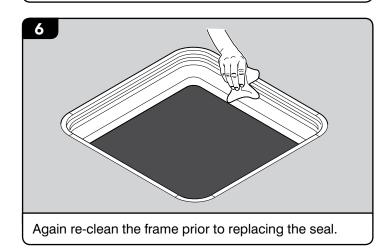


1 - 3 Issue: 12/06/2016


REPAIR INSTRUCTIONS

(Installing The New Seal)




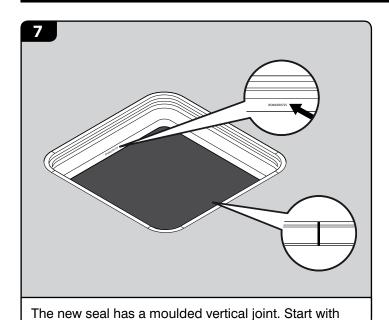



this joint directly opposite to the frame serial number.

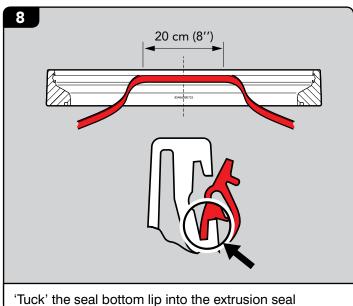


'Tuck' the seal bottom lip into the extrusion seal housing for approximately 20 cm (8")

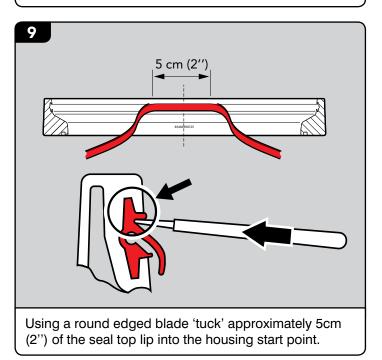

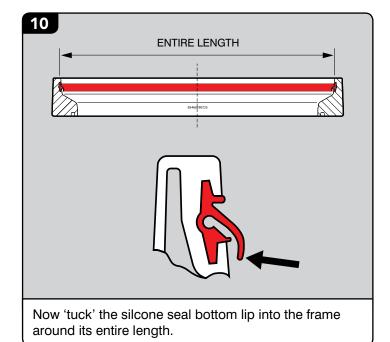

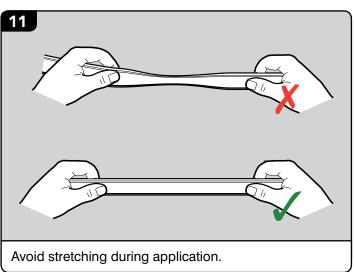


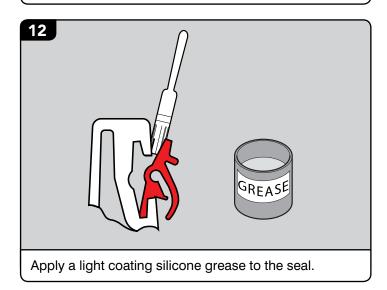


REPAIR INSTRUCTIONS

(Installing The New Seal)




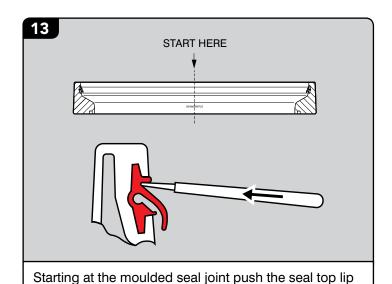


into the extrusion seal housing by running the blade

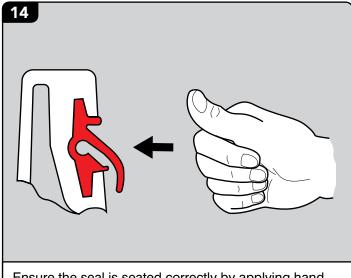

Ensure the seal is seated correctly by applying hand pressure to the front face of the seal.

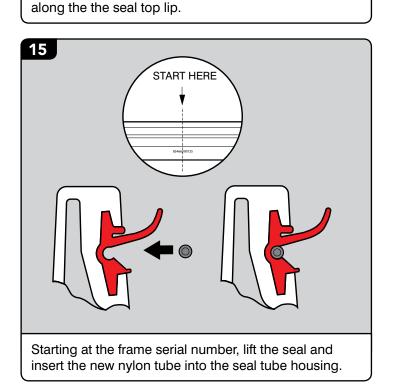

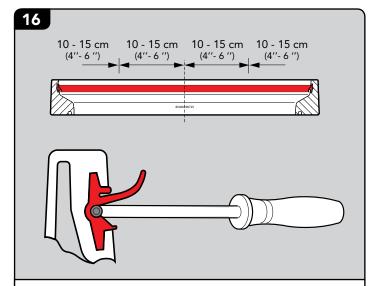

Put the fitting tool onto the nylon tube and run the tube into position whilst holding the main seal open. Perform this operation in stages of 10-15 cm (4"-6").

